

Universal Master Flash®

INSTALLATION GUIDE

Universal Size and Trimming

Universal Pipe Range	Mini	#1	#2	#3	#4	#5	#6	#7	#8	#9
Closed 0" - 2" (0-50mm)										
1	0" - 3/8" (0-9mm)	1/8" - 1-1/4" (3-31mm)	1-3/4" - 2" (45-51mm)	Closed Top 1 2-1/4" - 2-3/4" (57-70mm)	3" - 3-3/4" (75-95mm)	4-1/4" - 5" (108-127mm)	5" - 5-1/2" (125-140mm)	6" - 6-1/2" (150-165mm)	7" - 8" (175-195mm)	9" - 10" (22-254mm)
2	1/2" - 5/8" (12-15mm)	1-3/8" - 1-5/8" (34-41mm)	2-3/8" - 2-1/2" (60-65mm)	2 2-3/4" - 3-1/4" (70-83mm)	3-3/4" - 4-1/2" (95-114mm)	5" - 5-3/4" (127-146mm)	5-1/2" - 6" (140-150mm)	6-1/2" - 7" (165-180mm)	8" - 8-1/2" (195-210mm)	10" - 11" (254-279mm)
3	3/4" - 1" (19-25mm)	1-5/8" - 1-7/8" (41-47mm)	2-3/4" - 3" (70-76mm)	3 3-1/4" - 4" (83-102mm)	4-1/2" - 5-1/4" (114-133mm)	5-3/4" - 6-1/2" (146-165mm)	6" - 6-1/2" (150-165mm)	7" - 7-1/2" (175-195mm)	8-1/2" - 9" (210-225mm)	11" - 12" (279-304mm)
4				4" - 4-3/4" (102-121mm)	5-1/4" - 5-3/4" (133-146mm)	6-1/2" - 7" (165-178mm)	6-1/2" - 7" (165-180mm)	7-1/2" - 8" (195-205mm)	9" - 9-1/2" (225-240mm)	12" - 13" (304-330mm)
5				4-3/4" - 5" (121-127mm)	5-3/4" - 6-1/4" (146-160mm)	7" - 7-1/2" (178-190mm)	7-1/2" - 8" (190-205mm)	8-1/2" - 9" (220-230mm)	10" - 10-1/2" (255-270mm)	13" - 14" (330-355mm)
										14" - 15" (355-381mm)
										15" - 16" (381-406mm)
										16" - 17" (406-431mm)
										17" - 18" (431-457mm)
										18" - 19" (457-482mm)
										19" - 20" (482-508mm)

* Note This is the

#3 Universal For Reference


**Base Dimension: Mini 4" (101mm) | #1 4-3/4" (120mm) | #2 6-1/4" (158mm) | #3 7-3/4" (196mm)

#4 9-1/4" (234mm) | #5 10-1/2" (266mm) | #6 12-1/2" (317mm) | #7 14-1/2" (368mm) | #8 16-1/2" (412mm) | #9 25-1/4" (641mm)


- * Find pipe size in table and trim Universal Master Flash® as shown on outline.
- * Use one size larger Universal Master Flash® on steep roofs or deep corrugation.
- * Cut the flashing at least 20% less than the pipe Outer Diameter

5 Easy Steps Installation Materials: Universal Master Flash® | Fasteners | Washers | Snips/Scissors | Measuring Tape | Marker/Pencil | Sealant


Measure & Trim

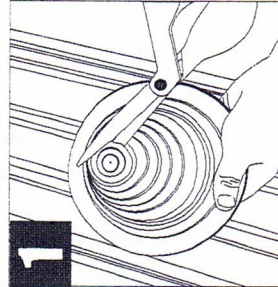


Slide

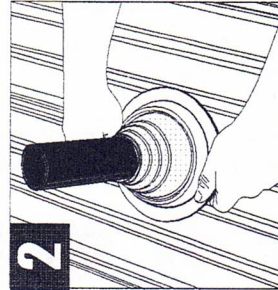


Form

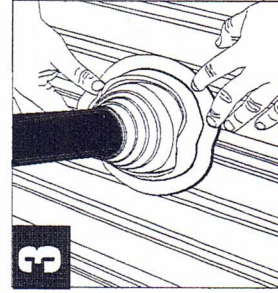

Seal

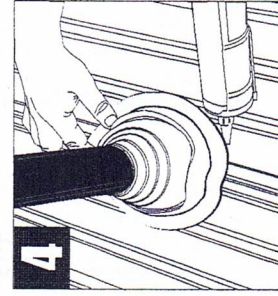

Complete

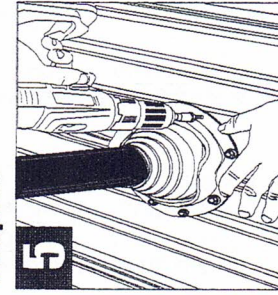

Roof Pitch Calculator
<https://rpc.aztecwasher.com>

Note: Properly installed the base with Master Seal® Bonded Washers and fasteners. Fasteners should be 1" - 1-1/2" apart around the entire base for a tight secure seal.



Installation Video: <http://www.aztecwasher.com/installationvideos>

universal Master Flash® is a product of Aztec Washer Company 4/2020